


## Instructions for completing Designs By Deb Oven Mit

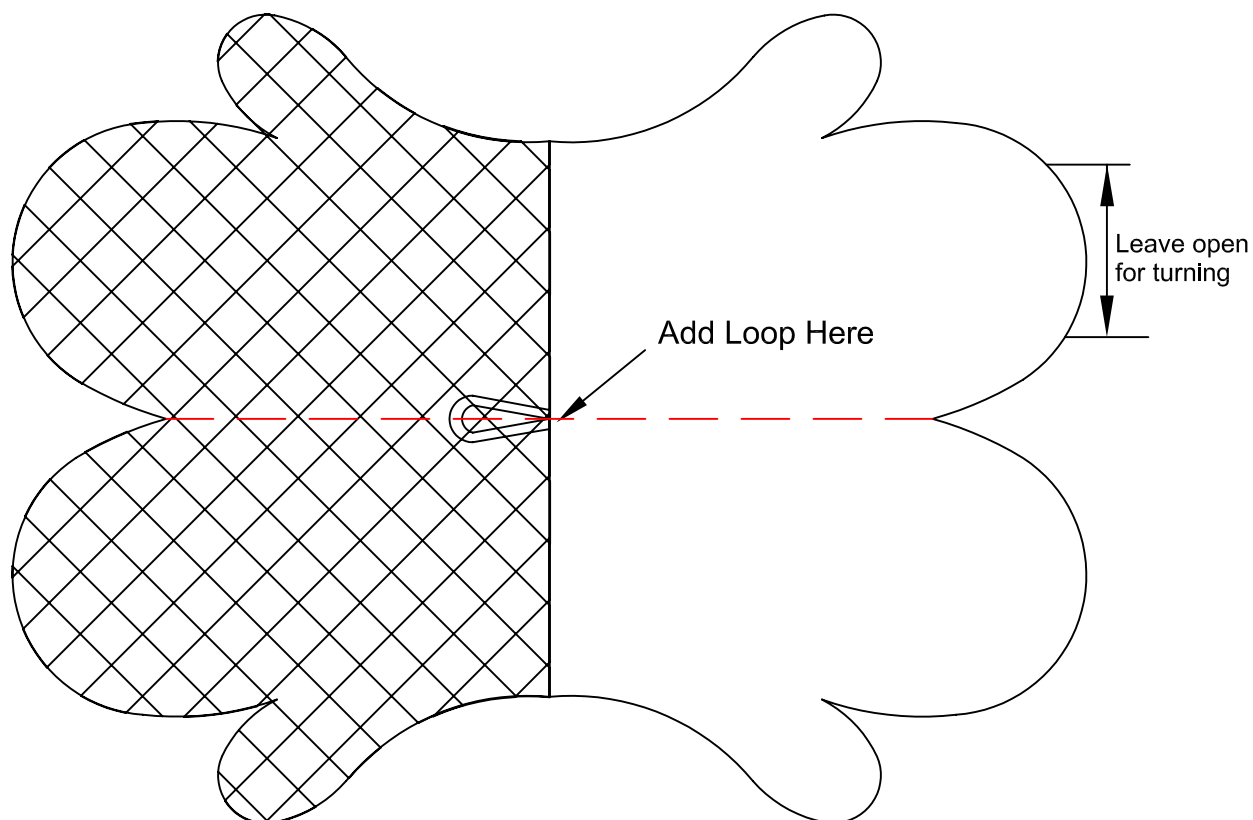

### Supplies:

- 1 fat quarter of main fabric.
- 1 fat quarter of lining (heat resistant teflon fabric works well)
- 1 yard of muslin backing
- scrap of batting
- $\frac{1}{2}$  additional yard heavyweight fusible fleece or heat resistant batting to be added after you stitch out the oven mit.

1. Read all instructions before beginning. Load backing and batting onto machine as you would for a quilt. Adjust the size to fit your needs. Baste your fabric to the batting/backing on top and both sides. Open pattern and choose repeat blocks. Stitch out design.

2. Remove from machine and trim pieces just outside the outer most stitching line. You will be using a  $\frac{1}{4}$ " seam line throughout.

3. Cut a 2 x 7" wide strip from the leftover fabric for hanging loop. Fold in half and then fold raw edges to center. Topstitch.

4. Cut a lining piece the same size as the mit. Baste hanging loop in place as shown lining up raw edges to the top of mit. Place lining and mit right sides together and sew across the top only. Press seam open and lay out flat as shown in diagram. Cut fusible fleece the same size as these two pieces sewn together and iron to **wrong** side of mit and lining. Fold lining and mit on foldline right sides together. Pin in place and stitch all the way around leaving opening for turning at bottom. Slip stitch opening closed. Push lining inside of mit and topstitch around top of mit through all layers.

5. Call or e-mail if you have suggestions or questions.